

HPSC-12 POST STORAGE CART PARTS:

SHIPS IN 1 BOX:

- (16) M10x1.5–60mm Long Bolts with Lock Nuts
- (2) 17mm/13mm Dual Wrench
- (1) 6mm Allen Key
- (1) Cart Base
- (2) Rigid Wheels
- (2) Swivel Wheels
- (24) M8x1.25–15mm Long Bolts with Lock Nuts
- (2) Side Frame Walls
- (2) Long Diagonal Bars (37")
- (2) Short Horizontal Bars (31")



(2) Short 31" Horizontal Bars are used at the top only

(1) 37" Long Diagonal Bar per side as shown. (They do not cross to create an X).


HPSC-24 POST STORAGE CART PARTS:

SHIPS IN 2 BOXES:

- (16) M10x1.5–60mm Long Bolts with Lock Nuts
- (3) 17mm/13mm Dual Wrench
- (2) 6mm Allen Key
- (1) Cart Base
- (2) Rigid Wheels
- (2) Swivel Wheels
- (36) M8x1.25–15mm Long Bolts with Lock Nuts
- (4) Side Frame Walls
- (4) Long Diagonal Bars (37")
- (2) Short Horizontal Bars (31")
- (2) Bungees



or

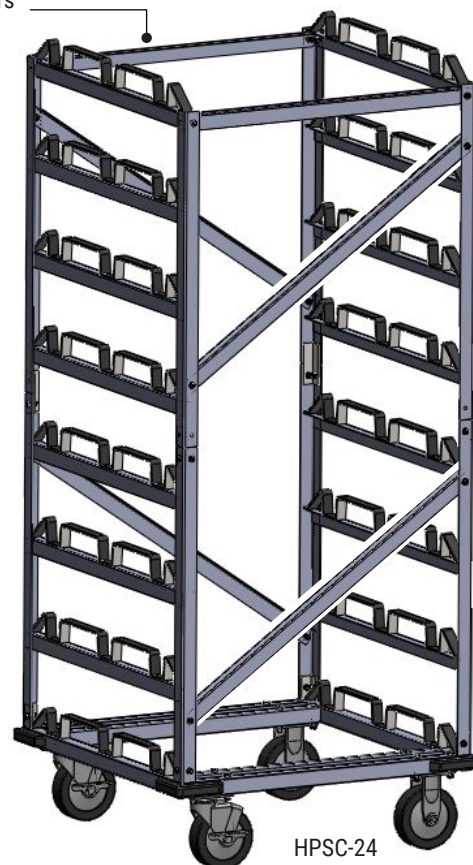

(2) 37" Long Diagonal Bars per side as shown. (They do not cross to create an X).

Assembly time is approximately
15 minutes for HPSC-12 and
30 minutes for HPSC-24 with two people.

Should you require assistance, please call
a People Guidance Pro at **631-582-8600**.

1

Turn Cart Base upside-down and assemble wheels with M10x1.5-60mm Long Bolts with Lock Nuts. Note location of Swivel and Rigid Wheels—(1) Swivel Wheel and (1) Rigid Wheel on each rail.

NOTE:
Hand tighten ALL screws before fully tightening with wrench and allen key.

2

Turn unit over onto wheels. Align Side Frame Walls with Post Holder Brackets on Cart Base and install M8x1.25-15mm Long Bolts with Lock Nuts.

3

Install 37" Long Diagonal Bars connecting both Side Frame Walls, ensuring that the flat edge nests into the corners of the Side Frame Wall so holes line up properly.

4

(If additional 31" Short Horizontal Bars are included, disregard)

(a) If assembling HPSC-12 cart: install 31" Short Horizontal Bars to connect the top of the Side Frame Walls.
(b) If assembling HPSC-24 cart: install second set of Side Frame Walls and 37" Long Diagonal Bars. Then install 31" Short Horizontal Bars to connect the top set of the Side Frame Walls.

5

Load Storage Cart starting from the bottom and alternate post direction so the bases are adjacent to post tops (as shown).

6

If assembling HPSC-24 cart, use Bungees to secure top posts by inserting bungee hook end into holes mid-way up the cart.