



**INCLUDED TOOLS & HARDWARE**

- 5/32" Allen Key
- #10-24 Socket Head Cap Screws (4x) per post assembly


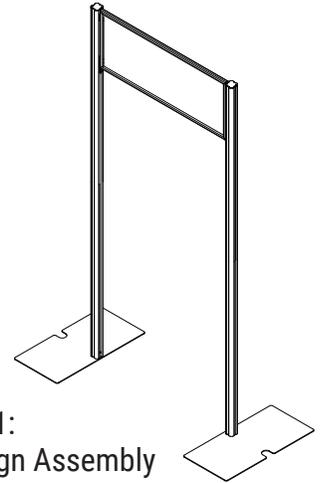


Figure 1:  
Typical Highway Sign Assembly

**ASSEMBLY INSTRUCTIONS**


Figure 2:  
Post and Base  
Assembly

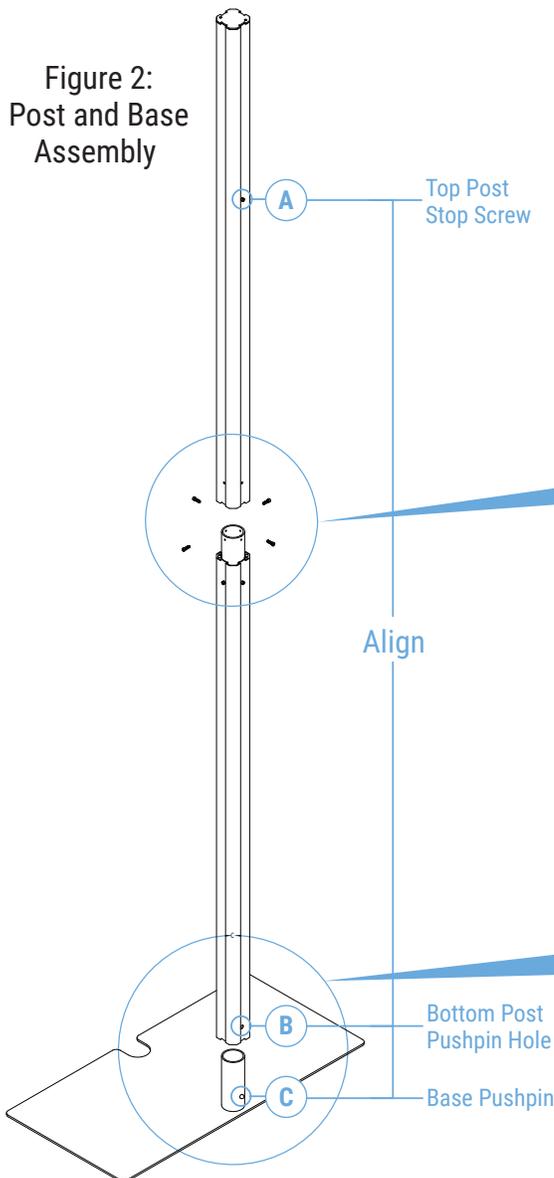


**1** Connect post top and bottom while aligning top post stop screw (A) and bottom post pushpin hole (B).

**2** Hand-tighten 4 screws into post connector before fully tightening with allen key.

**3** Connect post assembly to base by aligning bottom post pushpin hole (B) to base pushpin (C).

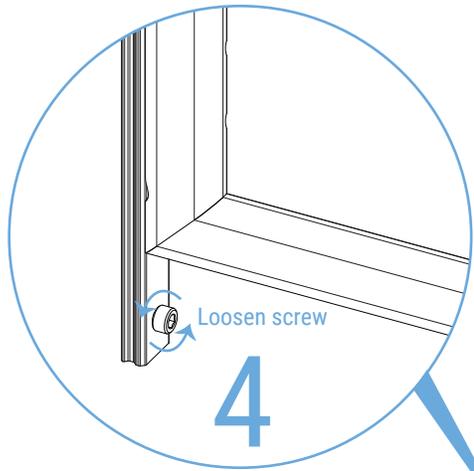

Loosen end block screws on panel.

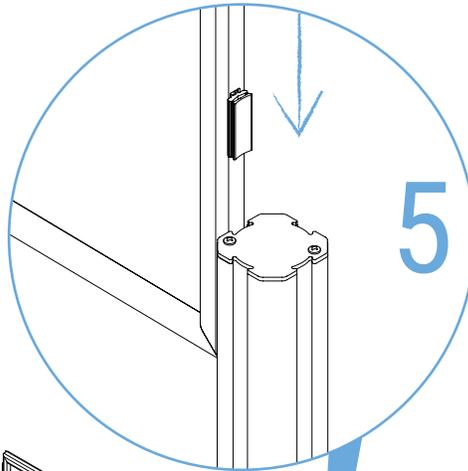

Install the panel into the posts with 2 people. Space posts 45.25" apart. With one person on each end of panel, guide panel end blocks into post grooves.


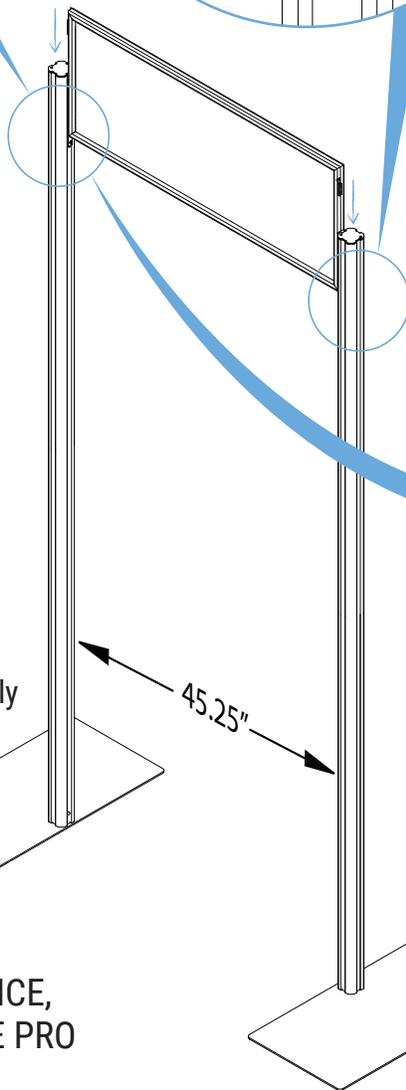


Figure 3:  
Panel Assembly

45.25"

6 Slide panel down until all four end blocks are engaged and rest on post stop screws

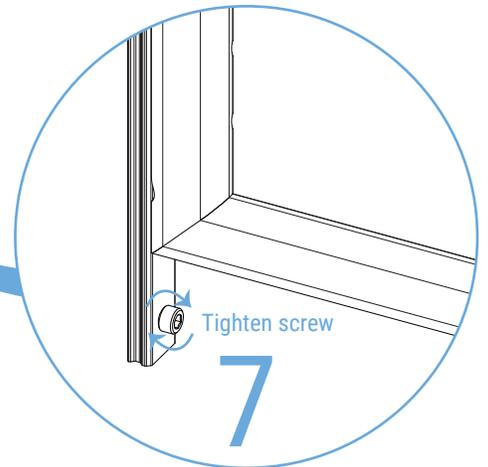

Tighten end block screws to ensure steadiness.

SHOULD YOU REQUIRE ASSISTANCE,  
PLEASE CALL A PEOPLE GUIDANCE PRO  
AT **631-582-8600**.

8 Adding sandbags to bases is required to ensure stability and safety.